

48002277

AFN

acessórios 4x4



Checklist / Manual de Montagem - P.choques frontal c/ envolvente - L200 2015



Checklist / Fitting Instructions - Bull bar - L200 2015



Despiezas / Instrucciones de montaje -



2h



1 x1 48002230		2 x1 48002231		3 x1 48002121		4 x1 47001690	
5 x1 46006341		6 x2 46006340		7 x1 46006333		8 x1 46006332	
9 x1 46006327		10 x1 46006326		11 x1 46006323		12 x1 46006322	
13 x1 46006321		14 x2 46001265		15 x1 46005518		16 x4 46006448	
17 x14 45000998		18 x2 45000537		19 x2 45000266		20 x2 45000247	
M6x20	<input type="checkbox"/>	Par. Cab. Red. M8x25	<input type="checkbox"/>	Prf.S.R.P.M12x90x35	<input type="checkbox"/>	Prf. Sx. M10x25x1,25	<input type="checkbox"/>
21 x4 45000074		22 x2 45000066		23 x14 45000050		24 x10 45000048	
Fêmea Freiada M6	<input type="checkbox"/>	Fêmea Freiada M12	<input type="checkbox"/>	Anilha M6x15x1,6	<input type="checkbox"/>	Anilha M8x16x1,6	<input type="checkbox"/>
25 x7 45000018		25 x15 45000039		26 x2 45000036		27 x2 45000017	
Fêmea Freiada M8	<input type="checkbox"/>	Anilha M10	<input type="checkbox"/>	Anilha Aba Larga M12	<input type="checkbox"/>	Fêmea Freiada M10	<input type="checkbox"/>
28 x3 45000014		29 x2 45000011		30 x10 45001012		31 x11 45000007	
Prf. Cb. Sx. M8x25	<input type="checkbox"/>	Anilha aba larga M8	<input type="checkbox"/>	Fem. M6 gaiola	<input type="checkbox"/>	Prf.Cb.Sx.M10x30x1,5	<input type="checkbox"/>
32 x4 45000070		33 x2 45001023		34 x2 45000028		35 x2 45000502	
Prf. Sx. M10x30x1,25	<input type="checkbox"/>	M8x140x30	<input type="checkbox"/>	Anil. aba lrg.rf. M8	<input type="checkbox"/>	Borracha vedação	<input type="checkbox"/>

Mitsubishi L-200 Did
Triton Cab. Dupla -
Mod. 2015 (15-)



Thank you for choosing AFN products, a lot of time in R&D has gone into perfecting our products. However, if you find problems with any AFN products you have purchased, or if you have any information which would help us to improve our products, please let us know.

If you think there may be a problem either before or after fitting the AFN product, it is best to contact your nearest AFN distributor.

WARNING

- This product should be installed as demonstrated in the product fitting instructions.
- If verified that any component is damaged, please contact your nearest AFN distributor.
- The specified parts, will only fit the models specified by AFN.
- Do not modify any component of the product.
- It is recommended that this product is installed by specialised and trained personnel.
- AFN cannot be responsible for any changes made by the vehicle manufacturer.
- Work safely and use specialised tools at all times.
- Always use protective gear.



size	Torque Nm	Torque lbft
M6	9Nm	4 lbft
M8	22Nm	16 lbft
M10	44Nm	32 lbft
M12	77Nm	57 lbft

- Tools set required:




CONTACTS

R. da Madeira, nº 113
Z. Industrial das Travessas
3700-176 S. João da Madeira
Portugal

Tel.: (+351) 256 838 300
Fax: (+351) 256 838 305
www.afn.pt
geral@afn.pt

COORDINATES

DATUM: European 79
UTM 05.44.100
29T 45.28.300
N 40°54' 14.0"
W 08°28' 35.0"

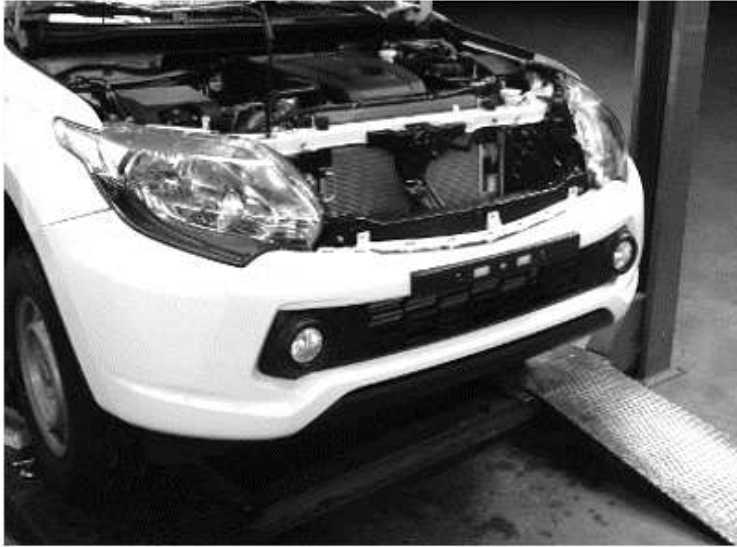01


- Remove the OEM front grill and bumper.

02**03**

- **!WARNING!**


If your vehicle is equipped with front intercooler system, please remove it before install the AFN bull bar.

04

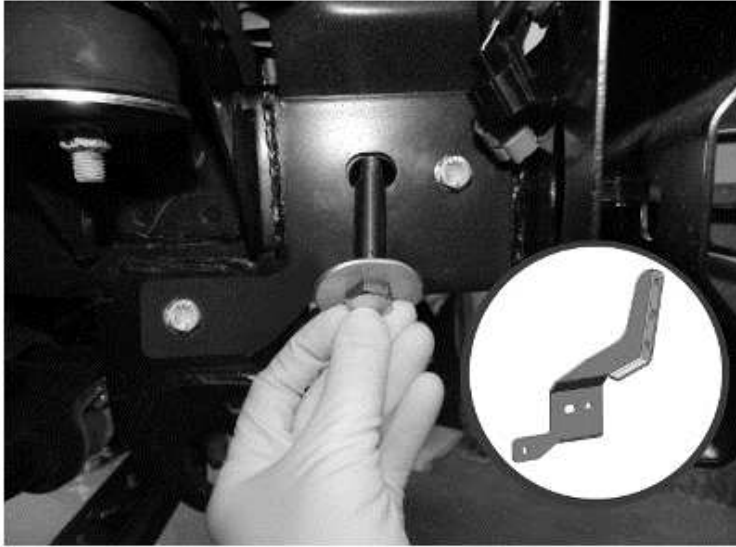


- Fit part number
46006327/46006326

05

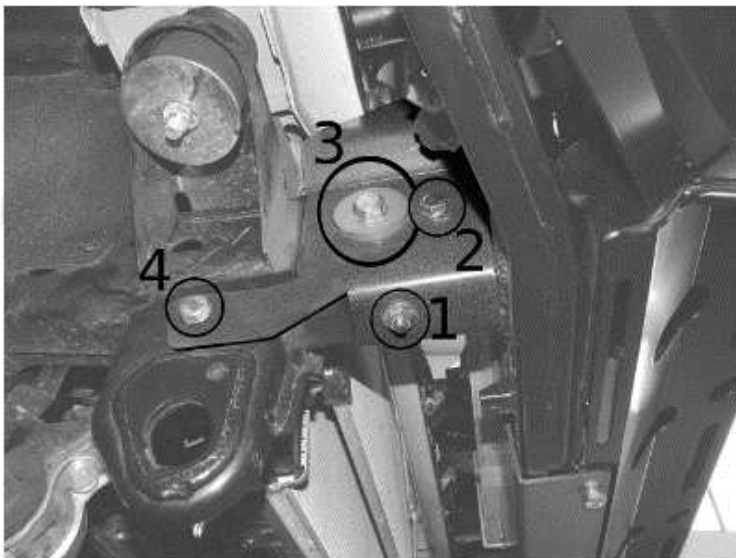


- Bolts needed:
1 - 45000011, 45001023
45000028, 45000018
2 - 45000247, 45000039
3 - 45000036, 45000266
4 - 45000039, 45000007
45000017

06

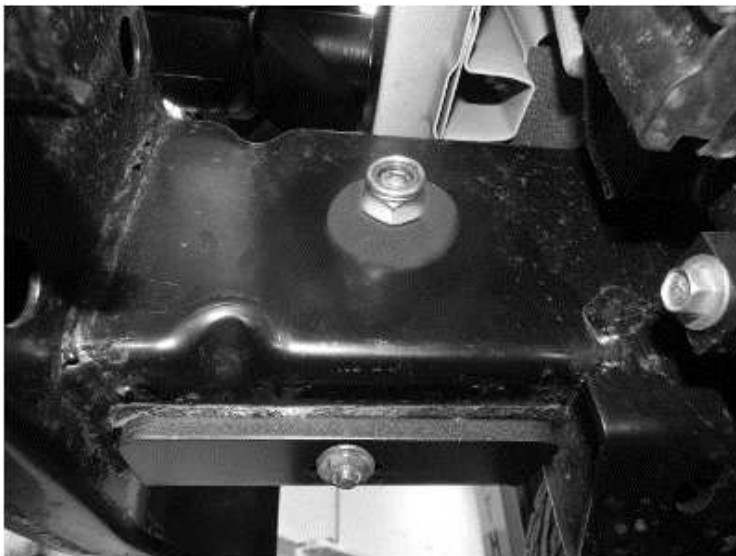


3 - 45000066, 46001265

07

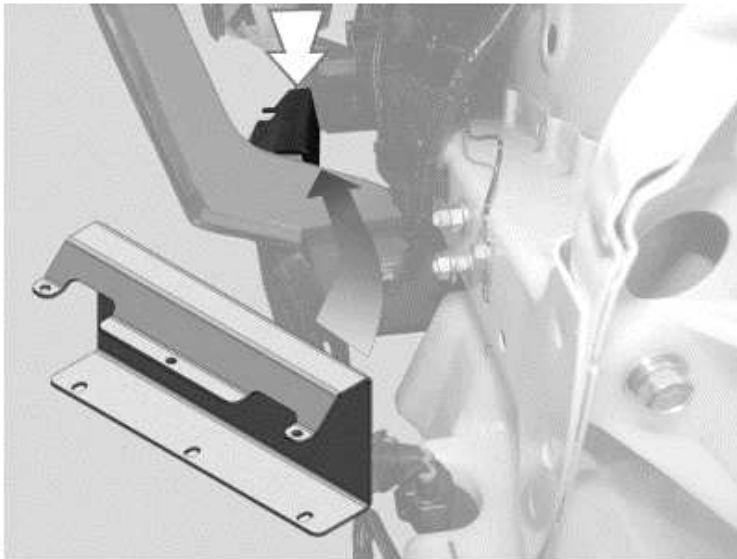

- Fit part number
46006321

08

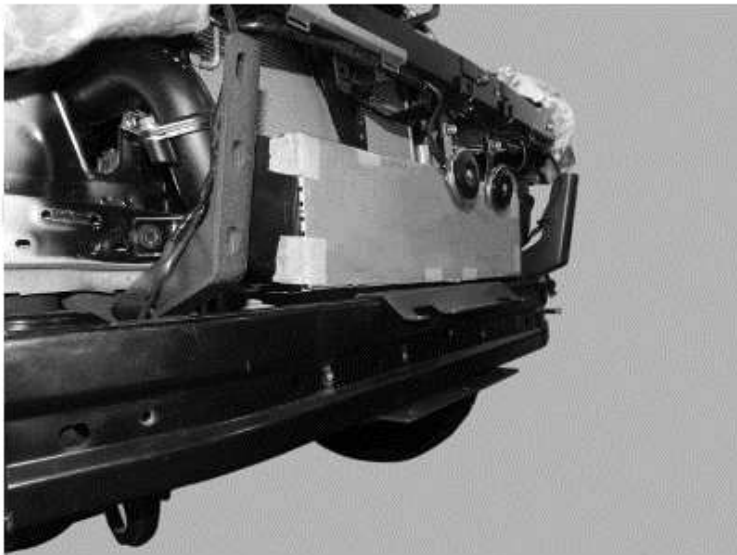


After placing the part, please
install the intercooler again.

09



If you are going to use the OEM
wheel arch, fit the part and use the
bottom line of the headlight to mark
and cut.

*If you don't want to cut the OEM
wheel arch please purchase the
AFN part number 48002290*

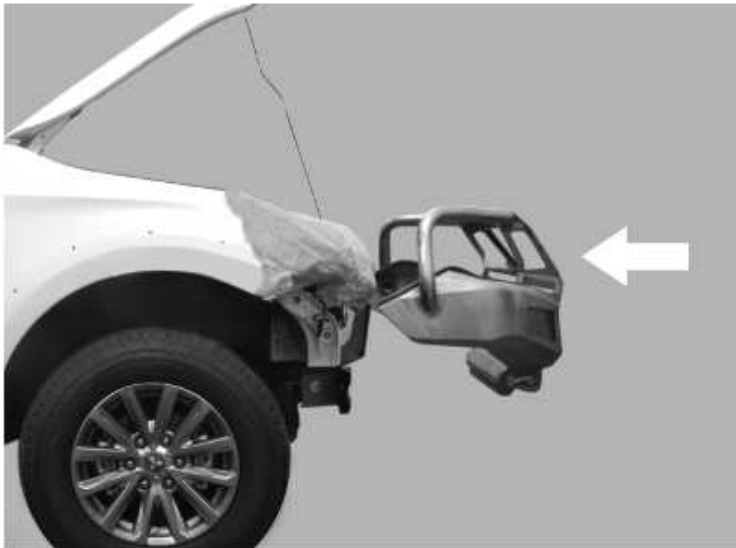
10

-Fit the part number 47001690

11

-Bolts needed
45000039/45000007


- Please finger tight all the bolts
before do the final torque.

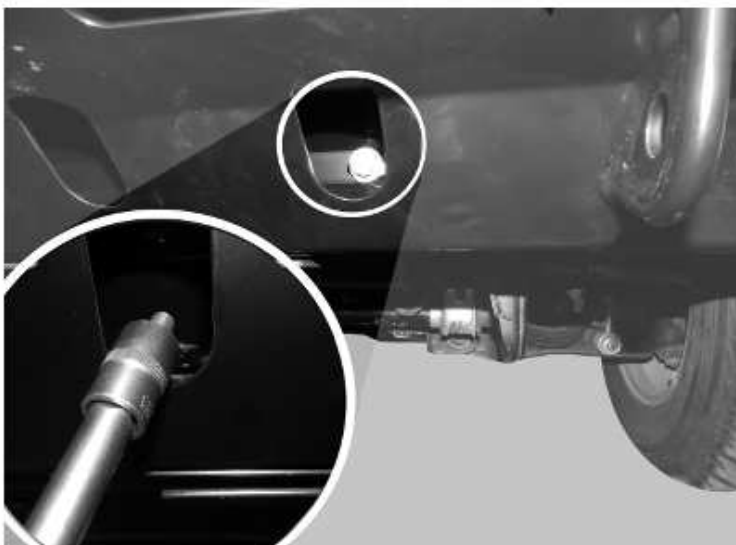12

- Bolts needed
46006448/45000070

- Please finger tight all the bolts
before do the final torque.


13

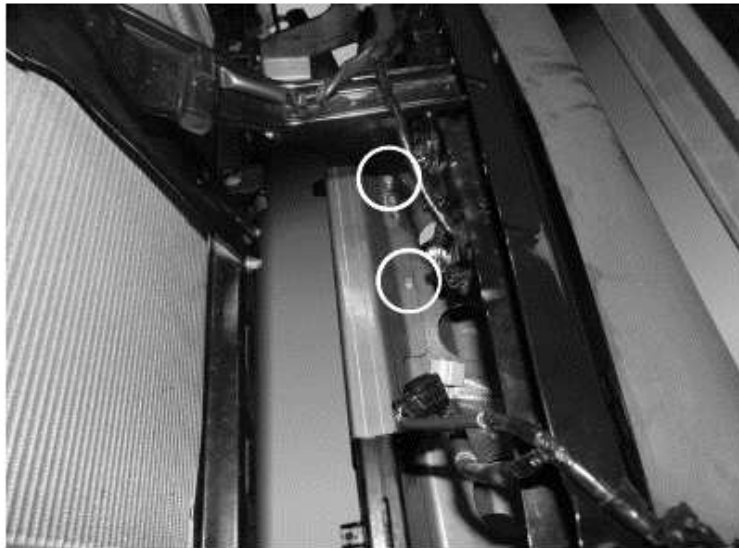

- Bolts needed
45000048/45000014
45000018

- Please finger tight all the bolts before do the final torque.


14

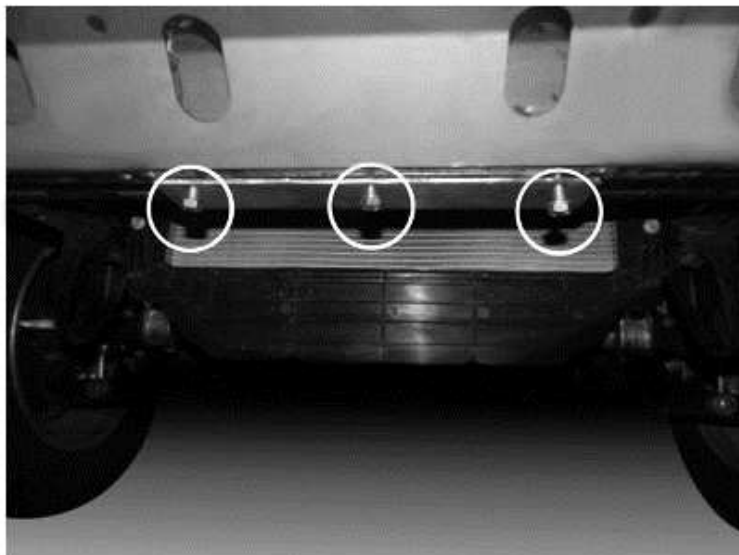

- Bolts needed
45000007/45000039

- Please finger tight all the bolts before do the final torque.

15

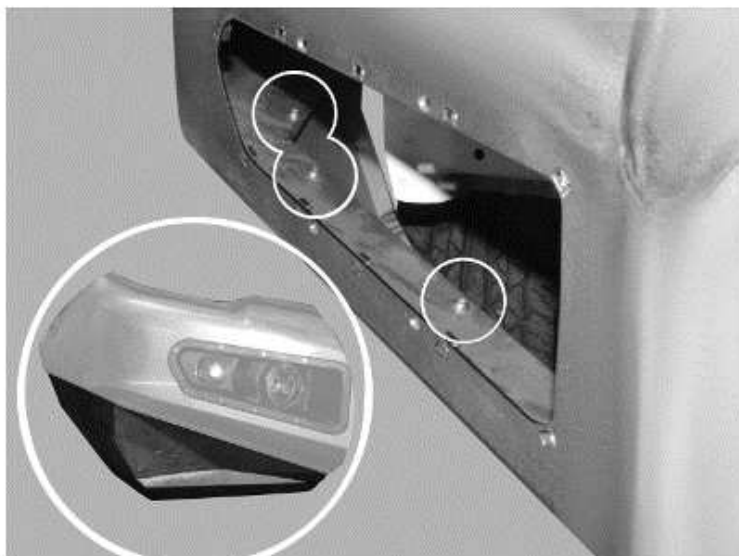

- Fit part number
46006322/46006323

- Bolts needed
45000998/45000050

16

-Fit the part number for OEM grill installation

46006332/46006333

-Use the OEM bolts:

17

-Fit part number
46006341

- Bolts needed

1- 4500998/45000050/45000074

2- 45000537/45000048/45000018

18

